

RX-V467/HTR-4063 How to program remote control codes For TV Control Key Operations



NOTE: The following steps must be completed within 1 minute. Settings will be automatically stopped after 1 minute passes since the last operation and steps 2 through 4 will have to be repeated.

- 1 Use the remote codes listed in this document to find your TV manufacturer code.
- 2 Press the Code Set button on the remote using a small pointed object such as a ball point pen or small paper clip.



- 3 Press the TV Power button on the bottom of the remote.



- 4 Enter in your TV remote control code using the Numeric Keys on the remote control.



Once the remote control code is registered successfully the Transmit light will blink twice. If the Transmit light blinks more than twice the code registration has failed. Steps 2 through 4 will need to be repeated.



If multiple control codes exist, start with the first one on the list. If it does not work, cross it off and try the next code until one works.

Genexxa	0320, 0340, 0347, 0350	Infinity	0010	Lifetec	0320, 0323, 0337, 0343	Multitech	0058, 0161, 0179, 0183, 0277, 0282, 0320, 0323, 0341, 0342, 0343, 0344, 0346, 0349
GFM	0128, 0227	InFocus	0250, 0327, 0363, 0479, 0508	Lloyds	0323		
Giant	0282	Ingelen	0347	Loewe	0161, 0168, 0265, 0320, 0330, 0352		
Gibraltar	0008, 0030, 0050, 0062	Ingersol	0323, 0343	Loewe Opta	0339, 0349, 0350	Murphy	0277, 0342
GoldHand	0277	Initial	0153	Logik	0054	NAD	0026, 0031, 0111
Goldline	0320	Inno Hit	0171, 0282, 0320, 0323, 0340, 0342, 0343, 0349, 0350	Luma	0320, 0323, 0346, 0349	Naonis	0346
GoldStar	0007, 0008, 0012, 0026, 0031, 0050, 0053, 0161, 0277, 0282, 0320, 0323, 0342, 0343, 0346, 0349, 0350	Innovation	0337, 0343	Lumatron	0282, 0320, 0346, 0349, 0350	NEC	0008, 0026, 0050, 0052, 0053, 0072, 0103, 0282, 0344
Goodmans	0246, 0272, 0282, 0320, 0323, 0337, 0343, 0344, 0349, 0350, 0462, 0473, 0477	Insignia	0131, 0228, 0236, 0238	Lux May	0350	Neckermann	0161, 0282, 0320, 0339, 0342, 0346, 0349, 0350, 0351
		Inteq	0030	Luxor	0282, 0342, 0346		
		Interactive	0161	LXI	0010, 0019, 0021, 0026, 0027, 0031, 0049, 0111	NEI	0320, 0349, 0350
		Interbuy	0323, 0343			Net-TV	0176
		Interfunk	0161, 0320, 0339, 0347, 0349, 0350	M Electronic	0342, 0343, 0345, 0347, 0349, 0350	Neufunk	0320, 0323
		International	0277			New Tech	0343, 0350
		Intervision	0161, 0282, 0320, 0337, 0341, 0342	MAG	0096	New World	0340
Gorenje	0161, 0351			MAG	0096	NewTech	0282, 0320, 0323
GPM	0340	Irradio	0171, 0320, 0323, 0340, 0343, 0349, 0350	Magnadyne	0339, 0341, 0349	Nicamagic	0277, 0342
GPX	0129			Magnafon	0171, 0277, 0341, 0342	Nikkai	0277, 0282, 0320, 0323, 0337, 0340, 0342, 0349, 0350
Gradiente	0240	Isukai	0320, 0340	Magnavox	0008, 0009, 0010, 0013, 0026, 0032, 0033, 0048, 0050, 0128, 0211, 0212, 0224, 0226, 0239	Nikko	0026, 0031, 0050
Graetz	0347	ITC	0282, 0342			Nobliko	0171, 0277, 0341, 0342
Granada	0171, 0282, 0320, 0321, 0342, 0344, 0346, 0349, 0350	ITS	0277, 0320, 0340, 0348, 0350				
Grandin	0340, 0343, 0348, 0349	ITT	0343, 0347			Nokia	0347
Gronic	0282	ITV	0320, 0343, 0349	Magnum	0337, 0343	Norcent	0201
Grundig	0160, 0161, 0171, 0310, 0320	Janeil	0057	Majestic	0054	Nordic	0282
		JBL	0010	Mandor	0337	Nordmende	0339, 0345, 0347, 0350
Grunpy	0058, 0059, 0179	JC Penney	0007, 0008, 0026, 0027, 0049, 0053, 0056	Manesth	0282, 0320, 0337, 0342, 0349, 0350	Nordvision	0349
Haier	0157, 0233	JCB	0055, 0107	Marantz	0008, 0010, 0026, 0050, 0204, 0320, 0349, 0350	Novatronic	0320
Halifax	0277, 0282, 0337, 0342	Jensen	0008, 0026			Oceanic	0321, 0347
Hallmark	0008, 0026, 0031	JVC	0012, 0014, 0015, 0056, 0064, 0065, 0067, 0169, 0174, 0297, 0314, 0344, 0350, 0375	Marelli	0339	Okano	0161, 0320, 0351
Hampton	0277, 0282, 0342			Mark	0277, 0282, 0320, 0323, 0349, 0350	Olevia	0102, 0199, 0200, 0207, 0222
Hanseatic	0161, 0168, 0282, 0320, 0323, 0342, 0343, 0344, 0349, 0350	Kaisui	0277, 0282, 0320, 0323, 0340, 0342, 0343, 0348	Masuda	0282	ONCEAS	0342
Hantarex	0320, 0323, 0343			Matsui	0282, 0320, 0323, 0342, 0343, 0344, 0346, 0349, 0350, 0455	Onwa	0058, 0179
Hantor	0320					Opera	0320
Harman/Kardon	0010	Kamosonic	0342	Matsushita	0017	Oppo	0130
Harvard	0058, 0179	Kamp	0277, 0342	Maxent	0147, 0176	Optimus	0017, 0019
Harwood	0320, 0323	Kapsch	0347	Mediator	0320, 0349, 0350	Optoma	0144
Havermy	0178	Karcher	0161, 0320, 0342, 0343, 0349	Medion	0320, 0337, 0343	Optonica	0178
HCM	0282, 0320, 0323, 0337, 0342, 0343, 0348	Kawasho	0008, 0026, 0055, 0277	Megapower	0140	Orbit	0320, 0350
Hema	0282, 0323	KEC	0179	Megatron	0026, 0031	Orion	0043, 0146, 0283, 0320, 0323, 0328, 0343, 0349, 0350
Hewlett Packard	0192	Kendo	0161, 0320, 0341, 0346	MElectronic	0277, 0282, 0320, 0323	Orline	0320
Higashi	0277			Melvox	0321	Osaki	0282, 0320, 0337, 0340, 0342
HiLine	0320	Kenwood	0008, 0026, 0050	Memorex	0019, 0026, 0031, 0053, 0054, 0137, 0215, 0323, 0343	Oso	0340
Hinari	0320, 0323, 0340, 0343, 0344, 0349, 0350	KIC	0282			Otto Versand	0282, 0320, 0336, 0342, 0344, 0348, 0349, 0350
Hisawa	0321, 0340, 0348	Kingsley	0277, 0342	Memphis	0323, 0343	Pael	0277, 0342
Hisense	0247	KLH	0039	Mercury	0320, 0323	Palladium	0161, 0282, 0320, 0342, 0351
Hitachi	0008, 0012, 0026, 0066, 0084, 0092, 0093, 0120, 0172, 0173, 0255, 0270, 0271, 0282, 0320, 0335, 0338, 0342, 0344, 0346, 0347, 0365, 0382, 0448, 0456, 0467	Kloss Novabeam	0057, 0058	Metz	0339	Panasonic	0016, 0017, 0020, 0022, 0023, 0035, 0052, 0056, 0084, 0085, 0133, 0163, 0193, 0284, 0286, 0290, 0292, 0320, 0325, 0347, 0356
		Kneissel	0161, 0168, 0320	MGA	0008, 0026, 0031, 0050, 0053	Panavia	0320
		Kolster	0320, 0350			Pathe Cinema	0161, 0168, 0277, 0321, 0342
		Konka	0340	Micromaxx	0337, 0343	Pausa	0323, 0343
		Korpel	0320, 0349, 0350	Microstar	0337, 0343	Penney	0021, 0023, 0031, 0050, 0111
		Korting	0161, 0339	Midland	0007, 0021, 0023, 0027, 0030, 0056, 0062	Perdio	0277, 0320
		Kosmos	0320			Perfekt	0320
		Koyoda	0343	Minerva	0171	Philco	0008, 0009, 0010, 0012, 0026, 0050, 0052, 0053, 0161, 0171, 0320, 0339
		KTV	0007, 0050, 0058, 0179, 0183, 0282, 0342	Minoka	0320, 0350	Philharmonic	0282, 0342
				Mintek	0153	Philips	0008, 0009, 0010, 0011, 0012, 0032, 0048, 0049, 0052, 0122, 0128, 0134, 0186, 0187, 0213, 0221, 0224, 0226,
Hornyphon	0320, 0350	Kyoto	0277, 0282	Mitsubishi	0008, 0026, 0031, 0053, 0066, 0084, 0093, 0098, 0150, 0178, 0289, 0320, 0339, 0344, 0350, 0376		
Hoshai	0340	Lasat	0161				
Huanyu	0277, 0342	Lenco	0323, 0343	Mivar	0161, 0168, 0171, 0277, 0282, 0342		
Hygashi	0277, 0282, 0342	Lenoir	0323, 0342, 0343	Monivision	0140		
Hyper	0277, 0282, 0323, 0342, 0343	Leyco	0320, 0337, 0349, 0350	Montgomery Ward	0054		
Hypson	0282, 0320, 0321, 0337, 0342, 0348, 0349, 0350	LG	0031, 0053, 0066, 0116, 0117, 0140, 0161, 0164, 0175, 0195, 0269, 0277, 0282, 0300, 0309, 0317, 0320, 0323, 0328, 0342, 0343, 0346, 0349, 0350, 0366, 0368, 0377, 0466, 0471, 0478	Motion	0171		
Hyundai	0141			Motorola	0052, 0178		
Iberia	0320	LG/GoldStar	0164	MTC	0008, 0026, 0050, 0053, 0161, 0277		
ICE	0277, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0350	Liesenk	0349	Multi System	0349		
ICeS	0277	Liesenkotter	0320				
Ilo	0148, 0153	Life	0337, 0343				
IMA	0058						
Imperial	0161, 0171, 0320, 0347, 0350, 0351						
Indiana	0320, 0349, 0350						

	0239, 0256, 0257, 0259, 0261, 0263, 0267, 0280, 0281, 0287, 0296, 0299, 0301, 0303, 0305, 0313, 0319, 0320, 0324, 0333, 0339, 0342, 0349, 0350, 0353, 0357, 0360, 0380, 0383, 0452, 0459, 0460		0339	Sonoko	0282, 0320, 0323, 0337, 0342, 0343, 0349, 0350	Tesmet	0350
		Robotron	0339	Sonolor	0321, 0347	Tevion	0337, 0343
		Rowa	0277, 0282	Sontec	0161, 0320, 0349, 0350	Texet	0277, 0282, 0323, 0342
		Royal Lux	0161	Sony	0038, 0044, 0045, 0047, 0055, 0104, 0105, 0107, 0110, 0123, 0184, 0220, 0248, 0249, 0251, 0252, 0254, 0326, 0343, 0344, 0371, 0374, 0457, 0475	Thomson	0162, 0188, 0189, 0285, 0320, 0322, 0342, 0345, 0350
		RTF	0339	Sound & Vision	0340, 0341	Thorn	0320, 0349
		Runco	0030, 0050, 0062	Soundesign	0008, 0026, 0031, 0058, 0059, 0179	TMK	0008, 0026, 0031
		Saba	0298, 0322, 0339, 0345, 0347	Soundwave	0320, 0349, 0350	TNCi	0030
		Saisho	0282, 0323, 0337, 0342, 0343	Squareview	0051	Tokai	0282, 0320, 0350
		Salora	0346, 0347	SSS	0008, 0058, 0179	Tokyo	0277, 0342
		Sambers	0171, 0341	Standard	0282, 0320, 0323, 0340, 0342, 0343, 0350	Tomashi	0348
Philips Magnavox	0011, 0032, 0033	Sampo	0007, 0008, 0026, 0050, 0176	Starlite	0058, 0179, 0320, 0323, 0349	Toshiba	0018, 0019, 0040, 0041, 0046, 0073, 0100, 0103, 0108, 0109, 0111, 0121, 0132, 0166, 0208, 0210, 0214, 0217, 0260, 0268, 0282, 0283, 0293, 0304, 0306, 0307, 0329, 0344, 0355, 0454
Phoenix	0161, 0277, 0320, 0339, 0349, 0350	Samsung	0004, 0005, 0006, 0007, 0008, 0012, 0026, 0031, 0036, 0050, 0053, 0076, 0077, 0079, 0114, 0124, 0125, 0126, 0127, 0139, 0161, 0183, 0185, 0190, 0191, 0258, 0264, 0277, 0282, 0320, 0323, 0334, 0337, 0342, 0343, 0349, 0350, 0351, 0373, 0453, 0468	Stenway	0348	Totevision	0007
Phonola	0277, 0320, 0339, 0349, 0350	Sandra	0277, 0282, 0342	Stern	0346, 0347	Towada	0282, 0347
Pilot	0007, 0008, 0050	Sansui	0043, 0109, 0320, 0350	Strato	0320, 0323	Trakton	0282
Pioneer	0008, 0026, 0094, 0095, 0161, 0320, 0345, 0347, 0349, 0350, 0458	Sanyo	0008, 0019, 0068, 0070, 0071, 0099, 0161, 0168, 0223, 0237, 0277, 0282, 0288, 0295, 0323, 0342, 0344, 0369, 0469	Stylandia	0282	Trans Continen	0282, 0320
Plantron	0320, 0323, 0337, 0350	Sansui	0043, 0109, 0320, 0350	Sunkai	0343	Transtec	0277
Playsonic	0282	Sanyo	0008, 0019, 0068, 0070, 0071, 0099, 0161, 0168, 0223, 0237, 0277, 0282, 0288, 0295, 0323, 0342, 0344, 0369, 0469	Sunstar	0320, 0323	Trident	0282
Polaroid	0039, 0142, 0202, 0234	SBR	0320, 0349	Sunwood	0320, 0323, 0343, 0350	Triumph	0320
Poppy	0323, 0343	Sceptre	0235, 0244	Superla	0277, 0282, 0342	Uher	0161, 0171, 0320, 0347, 0350
Portland	0007, 0008, 0026, 0053	Schaub Lorenz	0347	Superscan	0013, 0178	Ultravox	0277, 0320, 0339, 0341, 0342
Prandoni-Prince	0171, 0346	Schneider	0282, 0316, 0318, 0320, 0333, 0340, 0342, 0349, 0350, 0382	SuperTech	0277, 0320, 0323	Unic Line	0320
Precision	0282, 0342	Scotch	0026, 0031	Supra	0323, 0343	United	0349
Prima	0157, 0243, 0323, 0343, 0347	Scott	0008, 0012, 0026, 0031, 0058, 0059, 0149, 0179	Supre-Macy	0057	Universum	0161, 0171, 0282, 0320, 0337, 0349, 0350, 0351
Princeton	0140	Sears	0008, 0010, 0019, 0021, 0026, 0027, 0031, 0049, 0051, 0059, 0111	Supreme	0055, 0107	Univox	0320
Prism	0023, 0056	SEI	0277, 0282, 0320, 0323, 0337, 0341, 0342, 0344, 0349, 0382	Susumu	0340	Vector Research	0050
Profex	0323, 0343	SEI-Sinudyne	0339, 0341, 0347	Sutron	0323, 0343	Vestel	0282, 0320, 0346, 0347, 0349, 0350, 0351
Profi-Tronic	0320, 0350	Seleco	0344, 0346, 0347	SVA	0151	Vexa	0320, 0323, 0343, 0349
Proline	0320, 0350	Sencora	0323, 0343	Sydney	0277, 0282, 0342	Victor	0015, 0344, 0350
Proscan	0021, 0027, 0049	Sentra	0323	Sylvania	0008, 0009, 0010, 0011, 0013, 0026, 0048, 0050, 0051, 0128, 0227, 0253	VIDEOLOGIC	0277
Prosonic	0161, 0277, 0282, 0320, 0342, 0349	Serino	0277	Symphonic	0051, 0058, 0062, 0128, 0179, 0215	Videologique	0277, 0282, 0340, 0342
Protech	0282, 0337, 0341, 0342, 0343, 0349, 0350	Sharp	0000, 0001, 0002, 0003, 0007, 0008, 0012, 0026, 0060, 0088, 0089, 0091, 0138, 0165, 0170, 0178, 0198, 0229, 0262, 0278, 0279, 0291, 0308, 0312, 0336, 0344, 0354, 0370, 0449, 0450, 0451, 0464, 0474, 0476	Syntax	0199	VideoSystem	0320, 0350
Proton	0008, 0012, 0026, 0031	SEI	0339, 0341, 0347	Syntax-Brilliant	0199	Videotechnic	0277, 0282
Protron	0196	SEI-Sinudyne	0339, 0341, 0347	Sysline	0349	Vidikron	0010
PROVIEW	0096, 0246	Selec	0344, 0346, 0347	Sytong	0277	Vidtech	0008, 0026, 0031, 0053
Provision	0320, 0349	Sencora	0323, 0343	Tandy	0178, 0282, 0336, 0340, 0342, 0347	Viewsonic	0176, 0203, 0232, 0364
Pulsar	0008, 0030, 0062	Sentra	0323	Tashiko	0277, 0282, 0342, 0344, 0346	Viking	0057
Pye	0256, 0320, 0349, 0350, 0378	Serino	0277	Tatung	0052, 0177, 0282, 0320, 0342, 0349, 0350	Viore	0148
Pymi	0323, 0343	Sheng Chia	0178	TCM	0337, 0343	Visiola	0277, 0342
Quandra Vision	0321	Shogun	0008	Teac	0282, 0320	Vision	0282, 0320, 0350
Quasar	0017, 0023, 0052, 0056	Siarem	0320, 0339, 0341	Tec	0282, 0323, 0342, 0343	Vizio	0008, 0177, 0218, 0242, 0500, 0501, 0502, 0503, 0506
Quelle	0282, 0320, 0337, 0342, 0349, 0350	Sierra	0320, 0350	Technics	0017, 0023, 0056	Vortec	0320, 0349, 0350
Questa	0344	Siesta	0161	TechniSat	0274, 0496, 0497, 0499	Voxson	0171, 0320, 0339, 0346, 0347, 0350
Radialva	0320	Signature	0054	Techwood	0008, 0023, 0026, 0056	Waltham	0282, 0320, 0342
RadioShack	0019, 0021, 0031, 0050, 0179, 0320	Silva	0277	TEDELEX	0282	Wards	0008, 0009, 0010, 0026, 0031, 0048, 0049, 0050, 0053, 0054, 0059
RadioShack/Realistic	0007, 0008, 0012, 0026, 0049, 0058	Silver	0344	Teknika	0007, 0008, 0010, 0012, 0026, 0053, 0054, 0058, 0059, 0179	Watson	0320, 0349, 0350
Radiola	0282, 0320, 0349, 0350	Singer	0321, 0339, 0341	Teleavia	0345	Watt Radio	0277, 0341, 0342
Radiomarelli	0320, 0339	Sinudyne	0320, 0339, 0341, 0349	Telecor	0282, 0320	Waycon	0111
Radiotone	0161, 0320, 0323, 0350	Skantec	0347	Telefunken	0320, 0322, 0345, 0350	Wega	0320, 0339, 0344
Rank	0344	Solavox	0347	Telegazi	0320	Wegavox	0323
RCA	0008, 0021, 0024, 0025, 0026, 0027, 0042, 0049, 0052, 0053, 0063, 0136, 0225	Sonitron	0161, 0282	Telemaster	0320	Weltblick	0282, 0320, 0349, 0350
Realistic	0019, 0031, 0050, 0179			Telesonic	0320	Westinghouse	0107, 0216, 0220
Recor	0320			Telestar	0320	White Westinghouse	0037, 0090, 0277, 0320, 0341, 0342, 0349
Redstar	0320			Teletech	0320, 0323, 0343, 0349		
Reflex	0320			Teleton	0282, 0342		
Revovox	0161, 0320, 0349, 0350			Televideon	0277		
Rex	0337, 0346, 0347			Televideo	0277		
RFT	0161, 0168, 0339			Televisto	0321		
Rhapsody	0277			Tensai	0282, 0320, 0323, 0340, 0343, 0350		
R-Line	0320, 0349, 0350						
Roadstar	0323, 0337, 0340, 0343						

Yamaha	0008, 0026, 0050, 0053, 0080, 0081, 0082, 0083, 0086, 0087
Yamishi	0282, 0320
Yokan	0320
Yoko	0161, 0277, 0282, 0320, 0323, 0337, 0340, 0342, 0343, 0349, 0350
Yorx	0340
Zanussi	0282, 0346
Zenith	0008, 0028, 0029, 0030, 0031, 0054, 0061, 0062

Note:

If the codes are not available in this code list for your product then the receiver remote will not be able to control it. If it is a CD player you may be able to get it to work by trying the same manufacture DVD player codes. All the IR information on third party products is integrated at the time of manufacture and the Yamaha universal remotes are not re-programmable, meaning that their internal code libraries cannot be updated.