

YAMAHA NS-C60

Natural Sound
Center Speaker System

Thank you for selecting this Yamaha NS-C60 speaker system.
This model is designed mainly to be used as a center speaker system.

PRECAUTIONS

Read these precautions carefully before operating your speaker.

- When using an amplifier with a rated output power higher than the music input of the speaker, care should be taken never to exceed the speaker's music input.
- Do not attempt to clean the speaker with chemical solvents as this might damage the finish. To clean, wipe with a dry, soft cloth.
- To prevent the enclosure from warping or discoloring, do not place the speaker where it will be exposed to direct sunlight or excessive humidity.
- Do not place the speaker where it is liable to be knocked over or struck by falling objects. Stable placement will also ensure better sound performance.
- Placing the speaker on the same shelf or rack as the turntable can result in feedback.
- Anytime you note distortion, reduce the volume control on your amplifier to a lower setting. Never allow your amplifier to be driven into "clipping".
- **Secure placing is the owner's responsibility. YAMAHA shall not be liable to any accident caused by an improper placing of the speaker.**


PLACING THE SPEAKER

Place the speaker on top of the TV or on the floor under the TV or inside the TV rack so that it is stabilized.

When placing the speaker on top of the TV, prevent the speaker from falling down, put the provided slip-prevention pads at four positions on the bottom of the speaker where the speaker touches the surface of the TV.

Note

Though this speaker is a magnetic shielding type, there may be an influence on TV picture according to the type of TV or the placement of the speaker. In such a case, place the speaker apart from the TV so that there is no influence on TV picture.

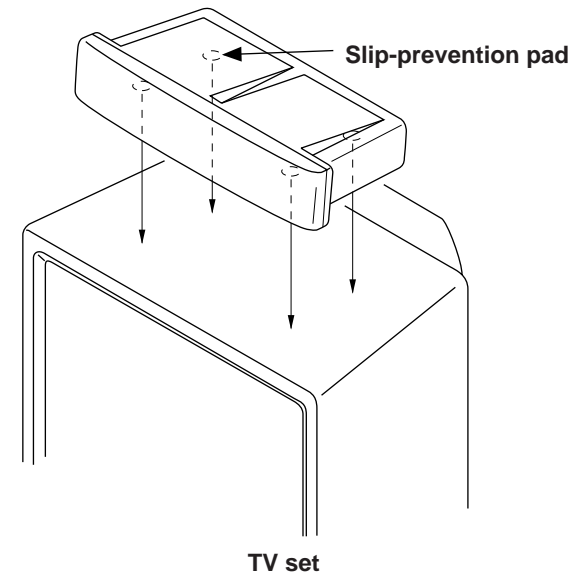

CONNECTION TO YOUR AMPLIFIER


BEFORE MAKING CONNECTIONS, MAKE SURE THAT THE AMPLIFIER IS SWITCHED OFF.

■ CONNECTIONS

- Connect the push-type input terminals at the rear of the speaker to the speaker output terminals of your amplifier with the provided speaker cables.
- One side of the speaker cable is marked by a white line. Connect the (+) terminals on both the amplifier and the speakers using this white-marked side. Connect the (-) terminals on both components using the unmarked side of the cable. If connected with reversed polarity, the sound will be unnatural and lack bass.

Procedures:

- ① Press the tab on the terminal down, as shown in the figure.
- ② Insert the bare wire end properly into the terminal hole. [Remove approx. 5 mm (1/4") insulation from the speaker cable.]
- ③ Remove your finger from the tab to allow it to lock snugly on the cable's wire end.
- ④ Test the security of the connection by tugging lightly on the cable at the terminal.

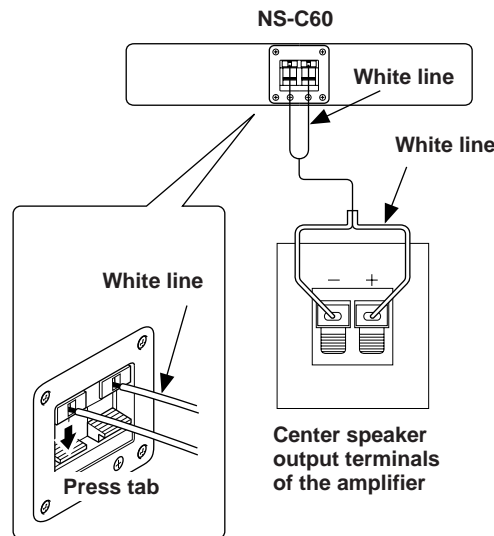

Note

Do not let the bare speaker wires touch each other as this could damage the speaker and/or the amplifier.

SPECIFICATIONS

| | |
|--------------------------|--|
| Type | 2 way bass-reflex speaker system Magnetic-shielding type (EIAJ) |
| Speaker Unit..... | 8 cm cone woofer (JA0858) x 2 Tweeter (JA05S0) x 1 |
| Input Terminal | Push-type |
| Nominal Impedance..... | 6 ohms |
| Frequency Response..... | 60 Hz – 20 kHz (-10 dB) |
| Nominal Input Power..... | 40W |
| Music Input Power..... | 80W |
| Sensitivity | 88 dB/w/m |
| Dimensions (WxHxD)..... | 435 x 100 x 221 mm (17-1/8" x 4" x 8-11/16") |
| Weight..... | 2.2 kg (4 lbs. 13 oz.) |
| Accessories | Speaker cable (4m) x 1 Slip-prevention pad x 4 |

* Specifications subject to change without notice due to product improvements.

* Care should be taken not to exceed the input power values noted above.

YAMAHA
YAMAHA CORPORATION